


CAMERA CONTROL UNIT

IK-TF9U

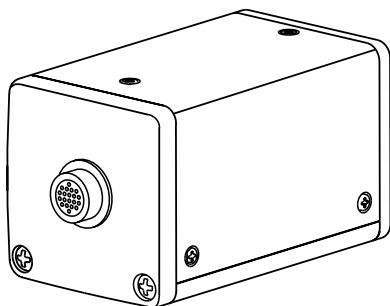

For Customer Use

Enter below the Serial # which is located on the bottom of the cabinet. Retain this information for future reference.

Model #: IK-TF9U

Serial #:

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

USER-INSTALLER CAUTION: Your authority to operate this FCC verified equipment could be voided if you make changes or modifications not expressly approved by the party responsible for compliance to Part 15 of the FCC Rules.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Following information is only for EU-member states:

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the takeback and recycling of this product, please contact your supplier where you purchased the product or consult.



SAFETY PRECAUTIONS

Safety icons

This manual contains safety instructions that must be observed in order to avoid potential hazards that could result in personal injuries, damage to your equipment, or loss of data. These safety cautions have been classified according to the seriousness of the risk, and the icons highlight these instructions as follows:

| | |
|------------------|---|
| ▲ WARNING | Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. |
|------------------|---|

| | |
|------------------|--|
| ▲ CAUTION | Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. |
|------------------|--|

| | |
|----------------|---|
| CAUTION | Indicates a potentially hazardous situation which, if not avoided, may result in property damage. |
|----------------|---|

| | |
|------------------|--|
| ▲ WARNING | Stop operation immediately when any abnormality or defect occurs. Use during an abnormal condition; such as emitting smoke, burning odors, damage from dropping invasion of foreign objects, etc. may cause fire and/or electric shock. Immediately stop the power source and contact your dealer. |
|------------------|--|

| | |
|------------------|---|
| ▲ WARNING | Avoid installing in a shower room or a bathroom. This may cause fire and/or electric shock. |
|------------------|---|

| | |
|------------------|---|
| ▲ WARNING | Do not operate in places with possibility of becoming wet. This may cause fire and/or electric shock. |
|------------------|---|

| | |
|------------------|--|
| ▲ WARNING | Do not repair, disassemble and/or modify by yourself. This may cause fire and/or electric shock. Be always sure to contact your dealer for internal repair, check and cleaning of the product. |
|------------------|--|

| | |
|------------------|---|
| ▲ WARNING | Use the specified power supply. Otherwise, a fire or an electric shock may occur. |
|------------------|---|

| | |
|------------------|---|
| ▲ WARNING | Don't place things or materials on the unit. Ingress of foreign materials such as metallic objects and/or liquids into the product may cause a fire or an electric shock. |
|------------------|---|

| | |
|------------------|--|
| ▲ WARNING | Do not put the product in an unstable, slanting and/or vibrated place. Drop and/or fall of the product may cause serious injury. |
|------------------|--|

| | |
|------------------|---|
| ▲ WARNING | Do not touch the product and/or any connection cables during a thunderstorm. This might cause electric shock. |
|------------------|---|

CAUTION**Note the following instructions when installing.**

- Do not cover the product by any material.
- Do not put the product on an Inflammable material such as carpet or blanket.
- Do not put the product in a narrow space, since the heat generated from the product may be difficult to emanate.

If you do not follow the above, the heat generated by the product may cause fire.

CAUTION**Do not placing the product in direct sunshine and/or high temperature.**

Temperature build up inside the product may result in fire.

▲ CAUTION**Avoid setting in humid, smoky, vaporized or dusty places.**

This may cause fire and/or electric shock.

CAUTION**Ask your dealer to perform a periodical check and internal cleaning (approx. once every five years).**

Dust inside the product may cause fire and/or trouble. For check and cleaning cost, please consult your dealer.

The following description is for that a camera head "IK-TF9H" connected to this camera control unit.

▲ CAUTION**Do not point the lens directly at the sun and/or intensive light such as direct sunlight, etc.**

Focusing of the light may cause injury of eye and/or fire.

Disclaimer

We disclaim any responsibility and shall be held harmless for any damages or losses incurred by the user in any of the following cases:

1. Fire, earthquake or any other act of God; acts by third parties; misuse by the user, whether intentional or accidental; use under extreme operating conditions.
2. Malfunction or non-function resulting in indirect, additional or consequential damages, including but not limited to loss of expected income and suspension of business activities.
3. Incorrect use not in compliance with instructions in this instruction manual.
4. Malfunctions resulting from misconnection to other equipment.
5. Repairs or modifications made by the user or caused to be made by the user and carried out by an unauthorized third party.
6. Notwithstanding the foregoing, Toshiba's liabilities shall not, in any circumstances, exceed the purchase price of the product.

Limitation of Usage

The product is not designed for any "critical applications." "Critical applications" means life support systems, exhaust or smoke extraction applications, medical applications, commercial aviation, mass transit applications, military applications, homeland security applications, nuclear facilities or systems or any other applications where product failure could lead to injury to persons or loss of life or catastrophic property damage. Accordingly, [Toshiba/TAIS] disclaims any and all liability arising out of the use of the product in any critical applications.

Protection of Personal Information

Images taken by the camera that reveal the likeness of an individual person may be considered personal information. To disclose, exhibit or transmit those images over the internet or otherwise, consent of the person may be required.

Copyright and Right of Portrait

There may be a conflict with the Copyright Law and other laws when a customer uses, displays, distributes, or exhibits an image picked up by the camera without permission from the copyright holder. Please also note that transfer of an image or file covered by copyright is restricted to use within the scope permitted by the Copyright Law.

TABLE OF CONTENTS

| | | | |
|--|-----------|--|--|
| 1. CAUTIONS ON USE AND INSTALLATION | 5 | | |
| 2. COMPONENTS | 5 | | |
| 3. NAMES AND FUNCTIONS | 6 | | |
| 4. CONNECTION | 7 | | |
| 4. 1 Standard Connection | 7 | | |
| 4. 2 Cautions on Connection | 7 | | |
| 4. 3 Connector Pin Assignments | 7 | | |
| 5. OPERATION | 8 | | |
| 5. 1 Automatic Black Balance | 8 | | |
| 5. 2 White Balance | 8 | | |
| 6. ITEMS CONTROLLED BY USING ON SCREEN DISPLAY | 10 | | |
| 7. MODE SETTING BY ON SCREEN DISPLAY | 11 | | |
| 7. 1 Using the Menus | 11 | | |
| 7. 2 Menus | 12 | | |
| (1) SHUTTER (Electronic shutter) | 12 | | |
| (1. 1) Changing each setting in MANU mode | 13 | | |
| (1. 2) Changing each setting in SS (synchro. scan) mode | 14 | | |
| (1. 3) Changing each setting in E.TRG mode | 15 | | |
| (1. 3. 1) Changing each setting in 1P SNR mode | 15 | | |
| (1. 3. 2) Changing each setting in 1P SR mode | 16 | | |
| (1. 3. 3) Changing each setting in PW SNR mode | 17 | | |
| (1. 3. 4) Changing each setting in PW SR mode | 18 | | |
| (1. 3. 5) Changing each setting in RR mode | 18 | | |
| (2) GAIN (Video gain) | 19 | | |
| (2. 1) Changing each setting in GAIN | 19 | | |
| (3) WHT BAL (White balance) | 20 | | |
| (3. 1) Changing each setting in AWB (Automatic White Balance) mode | 20 | | |
| (3. 2) Changing each setting in MANU (Manual) mode | 20 | | |
| (4) PROCESS | 21 | | |
| (4. 1) Changing gamma correction | 21 | | |
| (4. 2) Changing master pedestal | 21 | | |
| (4. 3) Changing R pedestal | 21 | | |
| (4. 4) Changing B pedestal | 21 | | |
| (4. 5) Changing the shading correction mode | 22 | | |
| (4. 6) Changing the manual shading correction setting | 22 | | |
| (5) SYNC | 22 | | |
| (5. 1) Adjusting horizontal phase | 22 | | |
| (6) OPTION | 22 | | |
| (6. 1) Changing serial communication baud rate | 22 | | |
| (7) Setting to factory setting status | 23 | | |
| 7. 3 Synchro. Scan Operation | 23 | | |
| (1) Setting by 2H | 23 | | |
| (2) Setting by the frame | 23 | | |
| 7. 4 E. TRG (External trigger) | 24 | | |
| (1) 1P SNR (1 Pulse Trigger Sync Non Reset) | 24 | | |
| (1. 1) 1 Pulse Trigger SYNC-NON RESET Picture Output Timing | 24 | | |
| (2) 1P SR (1 Pulse Trigger Sync Reset) | 25 | | |
| (2. 1) 1 Pulse Trigger SYNC-RESET Picture Output Timing | 25 | | |
| (3) PW SNR (Pulse width trigger SYNC-NON RESET) | 26 | | |
| (3. 1) Pulse Width Trigger SYNC-NON RESET Picture Output Timing | 26 | | |
| (4) PW SR (Pulse width trigger SYNC-RESET) | 27 | | |
| (4. 1) 1 Pulse Width Trigger SYNC-RESET Picture Output Timing | 27 | | |
| (5) RR (Reset restart) | 28 | | |
| (5. 1) Long Term Exposure | 28 | | |
| (5. 2) Input Timing Chart Example | 28 | | |
| 7. 5 Partial Read | 29 | | |
| (1) Partial Scanning OFF (All pixels scanning) | 29 | | |
| (2) Partial Scanning ON | 29 | | |
| (3) When Partial Scanning Mode is ON | 29 | | |
| 7. 6 External Sync | 30 | | |
| (1) External sync signal polarity | 30 | | |
| (2) External sync frequency range | 30 | | |
| (3) Using the unit with external sync signal .. | 30 | | |
| (3. 1) H (horizontal) phase adjustment | 30 | | |
| 8. INPUT OUTPUT SIGNAL SPECIFICATIONS | 31 | | |
| (1) HD Input Specifications | 31 | | |
| (2) VD Input Specifications | 31 | | |
| (3) Trigger Pulse Specifications | 31 | | |
| (4) External HD/VD Input Phase Specifications | 31 | | |

9. OUTPUT WAVEFORM TIMING CHART 32
(1) Horizontal Output Waveform Timing Chart ... 32
(2) Vertical Output Waveform Timing Chart... 32
10. SPECIFICATIONS 33
11. EXTERNAL APPEARANCE DIAGRAM 34
12. BEFORE MAKING A SERVICE CALL 35

This product is 3CCD color camera with digital video output.

1. CAUTIONS ON USE AND INSTALLATION

- **Handling the unit.**
Do not drop, jolt, or vibrate, as this may result in damage to the unit. This may cause problems. Treat the camera cables carefully to prevent cable problems, such as breaks in the cable and loose connections.
- **Install the camera in a location free from noise.**
If the camera or the cables are located near power utility lines or a TV, etc. undesirable noise may appear on the screen. In such a case, try to change the location of the camera or the cable wiring.
- **Operating ambient temperature and humidity.**
Do not use the camera in places where temperature and humidity exceed the specifications. Picture quality will deteriorate and internal parts may be damaged.
Be particularly careful when using in places exposed to direct sunlight. When shooting in hot places, depending on the conditions of the object and the camera (for example when the gain is increased), noise in the form of vertical strips or white dots may occur. This is not a malfunction.
- **When not using the camera for extended periods of time.**
Switch the control unit off and disconnect the power supply.
- **Avoid using or storing the camera in the following places:**
Places filled with highly flammable and corrosive gas.
Places near gasoline, benzene, or paint thinner.
Places subject to strong vibration.
Places containing chemicals (such as pesticides), rubber or vinyl products for extended periods of time.


The following descriptions are for that a camera head "IK-TF9H" connected to this camera control unit.

- **Do not shoot intense light.**
If there is an intense light at a location on the screen such as a spot light, a blooming and smearing may occur. When intense light enters, vertical stripes may appear on the screen. This is not a malfunction. Ghosts may occur when there is an intense light near the object. In this case, change the shooting angle.
- **Moire**
A moire pattern is an interference pattern generated when two repetitive line patterns overlap. This is not a malfunction. Eliminating the repetitive line patterns, or aligning the two patterns, will eliminate the moire.
- **Handling of the camera head and protection cap.**
Keep the camera head and protection cap away from as they may pose a choking hazard. The protection cap protects the image sensing plane when the lens is removed from the camera head, do not discard.
- **When cleaning the camera.**
Unplug the power source before cleaning. Clean with a soft dry cloth only. Do not use chemicals or chemically treated cloths. Chemicals may damage coatings and printed letters. When cleaning the lens, use lens cleaning paper.
- **Installation without a tripod.**
Before installing the camera head and the camera control unit, make sure that the location can withstand the total weight of the camera head and the camera control unit.
If this is not the case, reinforce the area to prevent the unit from dropping, which may result in damage to the unit or personal injury.

2. COMPONENTS

(1) Camera Control Unit 1
(2) Accessories
(a) Instruction manual 1

3. NAMES AND FUNCTIONS

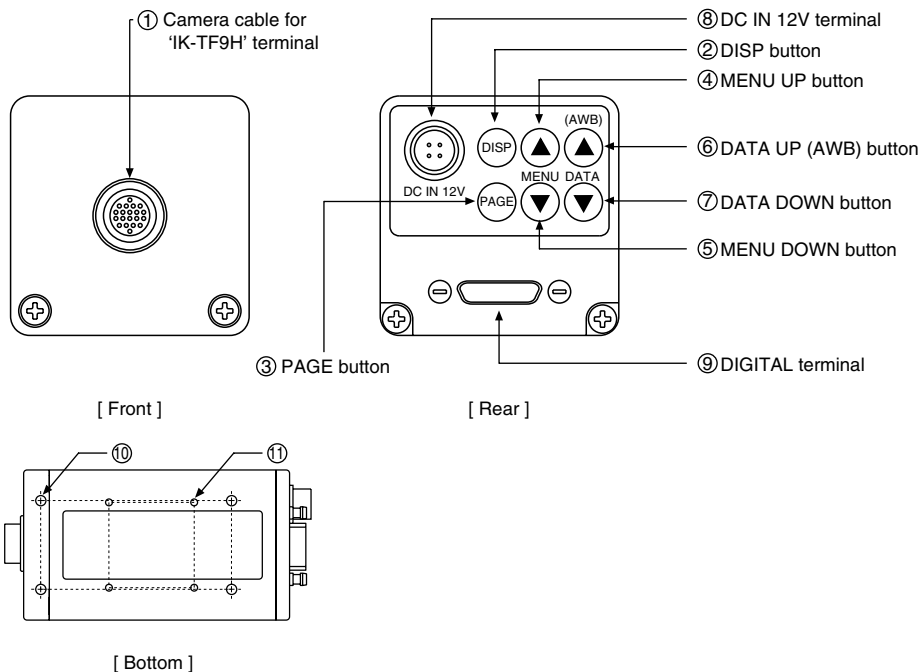

① Camera cable for 'IK-TF9H' terminal

② DISP button

③ PAGE button

④ MENU UP button

⑤ MENU DOWN button

⑥ DATA UP (AWB) button

⑦ DATA DOWN (ABB) button

⑧ DC IN 12V terminal

⑨ DIGITAL terminal

⑩ Mounting holes M3

⑪ Mounting holes M2

Where the camera cable for 'IK-TF9H' is connected.

Used when switching the display.

Used when switching to the menu and when selecting the menus.

Select the function to be confirmed or changed on the menu.

Select the function to be confirmed or changed on the menu.

Changes the value of the function selected by the MENU (UP/DOWN) button. (Also used when using AWB.)

Changes the value of the function selected by the MENU (UP/DOWN) button. (Also used when using ABB)

Accept a DC power input (12V).

8-bit RGB, digital signal, and sync signal are output in the Camera Link format.

Trigger signal is input.

Mode switching signal for partial scanning is input.


Accepts serial communication control signal.

Used to fix the camera.

Used to fix the camera.

4. CONNECTION

4.1 Standard Connection

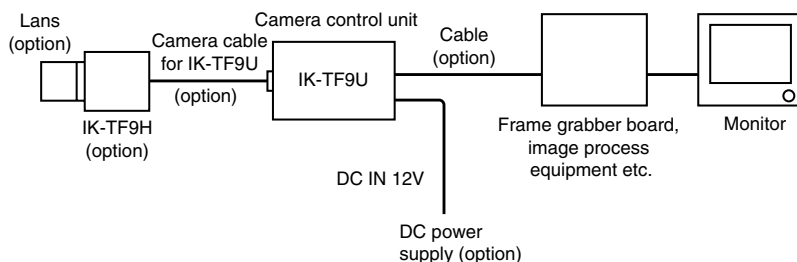

4.2 Cautions on Connection

- Only use optional camera head model # IK-TF9H with this camera controller.
The use of another head may cause damage to the control unit and camera head.
- When connecting the camera cables, be sure to turn off the camera control unit and any other equipment connected to it.
- For DC power supply connecting to DC IN 12V terminal, use UL listed and/or CSA approved ungrounded type AC adaptor with the specifications described below.


| | |
|----------------------|---|
| Power supply voltage | : 12V DC \pm 10% |
| Current rating | : More than 830mA, Less than 2.5A |
| Ripple voltage | : Less than 50mV(p-p) |
| Connector | : HR10A-7P-4S by HIROSE electronics Co. Ltd |
| | Pins 1, 2 : 12V |
| | Pins 3, 4 : GND |

- If the securing screw on the connector of the camera cable loosens, noise may appear on the screen.
Be sure to tighten the connector completely.
- Use the standard cable for Camera Link.

4.3 Connector Pin Assignments

DC IN 12V


| | |
|---|------|
| 1 | +12V |
| 2 | +12V |
| 3 | GND |
| 4 | GND |

 

Connector used:
HR10A-7R-4PB
(HIROSE electronics
Co. Ltd) or equivalent.

DIGITAL

| | | | | | Function | I/O |
|----|---------|----|---------|------------------------------------|----------|-----|
| 1 | GND | 14 | GND | | | — |
| 2 | X0- | 15 | X0+ | | | O |
| 3 | X1- | 16 | X1+ | | | O |
| 4 | X2- | 17 | X2+ | | | O |
| 5 | Xclk- | 18 | Xclk+ | | | O |
| 6 | X3- | 19 | X3+ | | | O |
| 7 | SerTC+ | 20 | SerTC- | Serial communication control (RXD) | | I |
| 8 | SerTFC- | 21 | SerTFC+ | Serial communication control (TXD) | | O |
| 9 | CC1- | 22 | CC1+ | Trigger pulse input | | I |
| 10 | CC2+ | 23 | CC2- | Partial scanning control | | I |
| 11 | CC3- | 24 | CC3+ | External HD input | | I |
| 12 | CC4+ | 25 | CC4- | External VD input | | I |
| 13 | GND | 26 | GND | | | — |

 

Connector used:
12226-51000-00
(3M) or equivalent.

5. OPERATION

A camera head "IK-TF9H" is supposed to be connected to this camera control unit from this section.

- ① Refer to the item " 4. CONNECTION", connect each equipment correctly.
- ② Turn on the connected equipment and the power source of the camera.
- ③ When using the camera for the first time and when replacing the camera cable and the camera head, be sure to operate the ABB adjustment refer to the item "Automatic Black Balance".
- ④ Aim the lens at the object, adjust the lens iris adjustment, focus adjustment, etc..
- ⑤ Refer to the item "5.1 White Balance", operate the adjustment.
- ⑥ Refer to the items "7. MODE SETTING BY ON SCREEN DISPLAY", select the necessary items.

5.1 Automatic Black Balance

Black balance adjustment is necessary to get the correct black picture level.

- Close the lens iris and put the lens cover on.
- If the index menu/menu is displayed, press the [DISP] button to disable or the character display.
- Hold the [DATA DOWN] button for approx. 1 second.
- When the black balance adjustment operation starts, the character ABB blinks on the screen.
- When the black balance adjustment operation finishes, the character ABB stops blinking and the result appears for approx. 1 second.
- When the black balance adjustment performed, set the electronic shutter, Synchro. Scan, partial read to OFF, and do not operate trigger mode or external sync.
- When using the camera for the first time and when replacing the camera cable and the camera head, be sure to operate the ABB adjustment refer to the item "Automatic Black Balance".

| Display | Meaning |
|----------------------|--|
| ABB OK | Automatic black balance adjustment finished correctly. |
| ABB NG CLOSE LENS | Automatic black balance adjustment cannot be performed because the lens iris is open. Close the lens iris. |
| ABB NG | Automatic black balance adjustment cannot be performed. Operate the automatic black balance again. |

5.2 White Balance

For the white balance adjustment for this unit, AWB (Automatic White Balance) and MANU (Manual white balance) adjustments are provided. To select the desired mode, refer to the items "7.2 (3) WHT BAL (White balance)" and "7. MODE SETTING BY ON SCREEN DISPLAY".

| | AWB (Automatic White Balance) | MANU (Manual White Balance) |
|---------|--|---|
| Outline | Adjust white balance by displaying the white object inside the area set by AWB menu and pressing the [DATA UP] button. | Adjust the white balance manually using the WHT BAL menu while shooting the white object. |
| Note | When the shutter mode is E.TRG, AWB is not available. | Adjustment is performed by confirming with a monitor etc. |

① AWB (Automatic white balance)

- Set the MODE to AWB on the WHT BAL menu.
Perform the C.TEMP (color temperature conversion) setting, if necessary.
(Refer to the item "7.2 (3) WHT BAL (White balance)".)
- 3200K : Appropriate for indoor shooting.
- 5600K : Appropriate for outdoor shooting.
- If the index menu/menu is displayed, press the [DISP] button to disable the character display on the menu.
- Shoot a known white object that fills the screen and push [DATA UP] button for approx. 1 second.
- The character AWB blinks on the screen when the AWB starts.
- The character AWB stops blinking when the AWB finishes, and the result is displayed for approx. 1 second.

| Result displayed | Meaning |
|-----------------------------|---|
| AWB OK | Automatic white balance adjustment finished correctly. |
| AWB NG LEVEL LOW | Automatic white balance adjustment cannot be performed because the video level is too low. Obtain the proper video level. |
| AWB NG LEVEL HIGH | Automatic white balance adjustment cannot be performed because the video level is too high. Obtain the proper video level. |
| AWB NG C. TEMP LOW | Automatic white balance adjustment cannot be performed because the color temperature is too low. If the C.TEMP is set to 5600K, set to 3200K. If the message appears with the C.TEMP set to 3200K, change the illumination or use a color temperature conversion filter. |
| AWB NG C. TEMP HIGH | Automatic white balance adjustment cannot be performed because the color temperature is too high. If the C.TEMP is set to 3200K, set to 5600K. If the message appears with the C.TEMP set to 5600K, change the illumination or use the color temperature conversion filter. |
| AWB NG NOT AVAILABLE | Automatic white balance adjustment cannot be performed because the shutter speed mode is E.TRG mode. |
| AWB NG | Automatic white balance adjustment cannot be performed for other reasons. Such as no white area is included in an object, etc. |

② MANU (Manual white balance)

- Set the MODE to MANU on the WHT BAL menu.
(Refer to the item "7.2 (3) WHT BAL (white balance)".)
- Shoot a known white object, adjust the white balance adjusting the levels of R GAIN and B GAIN on the menu, confirming with a monitor etc.
(Refer to the item "7.2 (3) (3.2) Changing each setting in MANU (Manual) mode".)

6. ITEMS CONTROLLED BY USING ON SCREEN DISPLAY

| Item | | Available selections | Preset value (Factory setting) |
|--------------------|---------------------------|--|-----------------------------------|
| Electronic shutter | MODE | MANU, SS, E. TRG | MANU |
| | E. TRG | 1P SNR, 1P SR, PW SNR, PW SR, RR | 1P SNR |
| | MANU speed | OFF, 1/100s, 1/250s, 1/500s, 1/1000s, 1/2000s, 1/4000s, 1/10000s, 1/25000s, 1/50000s, 1/1000000s | OFF |
| | Syncro. scan. | Partial read OFF | OFF |
| | | Partial read 25fps | |
| | | Partial read 30fps | |
| | | Partial read 35fps | |
| | | Partial read 40fps | |
| | | Partial read 45fps | |
| | | Partial read 50fps | |
| | Partial read | OFF, 25fps, 30fps, 35fps, 40fps, 45fps, 50fps, E25fps, E30fps, E35fps, E40fps, E45fps, E50fps | OFF |
| | Trigger (1P SNR/SR) | ┐┐, ┐┐ | ┐┐ |
| | Trigger (PW SNR/SR) | ┐┐, ┐┐ | ┐┐ |
| | 1P exposure time | 0.01ms~50ms | 50 ms |
| Gain | MODE | MANU, OFF | OFF |
| | MANU | 0dB~18dB | 0dB |
| Write balance | MODE | AWB, MANU | AWB |
| | Color temperature | 3200K, 5600K | 3200K |
| | MANUAL R GAIN | -100~0~100 | 0 |
| Process | MANUAL B GAIN | -100~0~100 | 0 |
| | GAMMA | ON, OFF | OFF |
| | Master pedestal | -64~0~64 | 0 |
| | R pedestal | -64~0~64 | 0 |
| | B pedestal | -64~0~64 | 0 |
| | Shading correction mode | MANU, OFF | MANU |
| | Manual shading correction | -128~0~127 | 0 |
| Sync | H phase adjustment | -100~0~100 | 0 |
| Option | Baud rate | 9600 bps, 19200 bps | 9600 bps |


7. MODE SETTING BY ON SCREEN DISPLAY

Various settings can be controlled on the unit by using the on screen menu displayed on the monitor. The contents once set are memorized even if the power source is turned off, so it is unnecessary to set again when using the unit next time. When the setting is performed, select the menu of the item to be set.

7.1 Using the Menus

When the power is turned on, the normal screen showing only the video signal appears. Change the output to each screen (video signal output, Index menu, and menus) by using the [DISP], [PAGE], [MENU UP], and [MENU DOWN] buttons.

* A menu is selected when pushing the [PAGE] button after moving the "→" on the screen by the [MENU UP], [MENU DOWN] button while the Index menu is displayed.

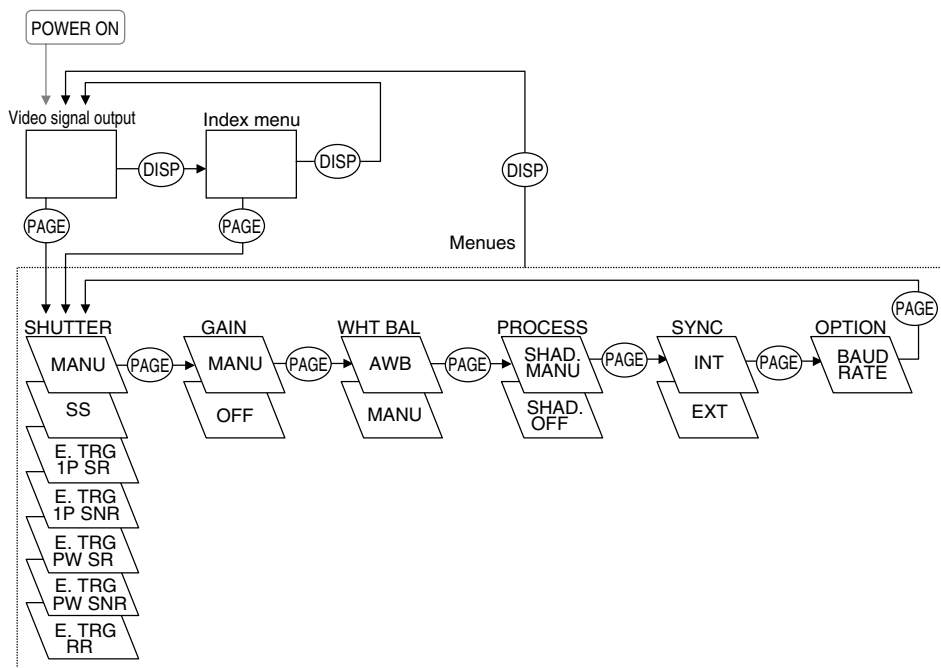

7.2 Menus

- Select the menu to change the setting by referring the item "7.1 Using the Menus".)
- When the [MENU UP], [MENU DOWN] buttons are pushed, the "→" on the screen moves up and down. Move the "→" to the item to change.

Note:

When performing the mode setting in the menu display while selecting ON in "PART" (Partial Read: refer to page 29) and E.TRG in "MODE", the screen display and camera operation switch to normal mode. After close the MENU, they return to previous mode.

(1) SHUTTER (Electronic shutter)

The electronic shutter has three modes; MANU (Manual), SS (Synchro. Scan), E.TRG (External trigger).

Set the "→" to "MODE" and push [DATA UP], [DATA DOWN] button to select the desired mode among "MANU", "SS", "E.TRG".

MANUAL : It is possible to select the exposure time from eleven speed setting; OFF, 1/100s, 1/250s, 1/500s, 1/1000s, 1/2000s, 1/4000s, 1/10000s, 1/25000s, 1/50000s, 1/100000s.

Note:

When setting a rapid shutter speed, sensitivity degrades according to the speed. When a discharging light such as fluorescent lamp, etc. is used for the illumination, the flicker may be large.

SS : Shutter speed can be set by the double horizontal scanning time (2H) unit or by the frame unit.

E.TRG : Exposure is performed and images are output by external trigger. E.TRG includes the four modes described below. (For details of specifications, refer to the item "7.4 E.TRG (External trigger)".)

- **1P SNR (1 Pulse Sync Non Reset)**

The charge begins to accumulate after the trigger pulse is received, and 1 frame images are output according to the internal vertical sync signal timing. The exposure/accumulation time can be set from 0.01 to 50 ms. The trigger signal timing can be set to either the rising or falling edge.

- **1P SR (1 Pulse Sync Reset)**

The charge begins to accumulate after the trigger pulse is received. Upon completion of accumulation the vertical sync signal is reset and 1 frame images are output. The exposure/accumulation time can be set from 0.01 to 50 ms. The trigger signal timing can be set to either the rising or falling edge.

- **PW SNR (Pulse width trigger Sync Non Reset)**

The charge begins to accumulate after the trigger pulse is received, and 1 frame images are output according to the internal vertical sync signal timing. This is the mode to set the exposure period by the pulse width of the trigger. The trigger signal polarity can be set to either the positive or negative polarity.


- **PW SR (Pulse width trigger Sync Reset)**

The charge begins to accumulate after the trigger pulse is received. Upon completion of accumulation the vertical sync signal is reset and 1 frame images are output. This is the mode to set the exposure period by the pulse width of the trigger. The trigger signal polarity can be set to either the positive or negative polarity.

- **RR (Reset restart)**

Input of an external reset-restart signal permits one screen of information to be output at an arbitrary timing.

(1. 1) Changing each setting in MANU mode

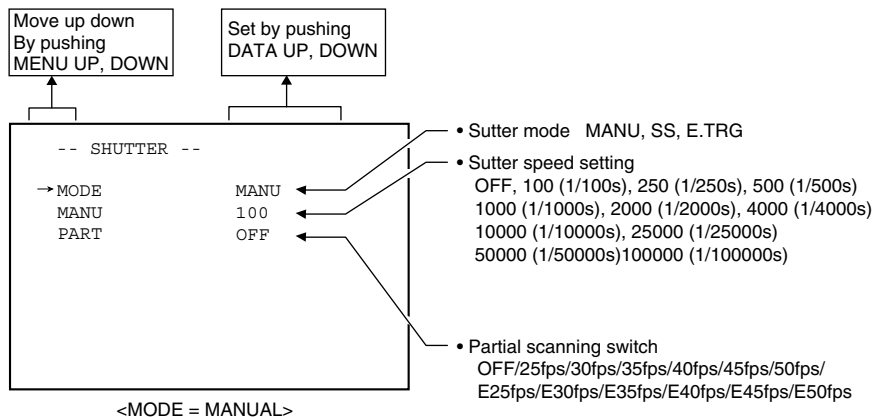


(a) Changing the shutter speed

- ① Set the "→" to MANU by pushing [MENU UP], [MENU DOWN] buttons.
- ② Set the shutter speed by pushing [DATA UP], [DATA DOWN] buttons.

(b) Partial scanning setting

- ① Set the "→" to PART by pushing [MENU UP], [MENU DOWN] buttons.
- ② Select the mode by pushing [DATA UP], [DATA DOWN] buttons.

(1. 2) Changing each setting in SS (synchro. scan) mode

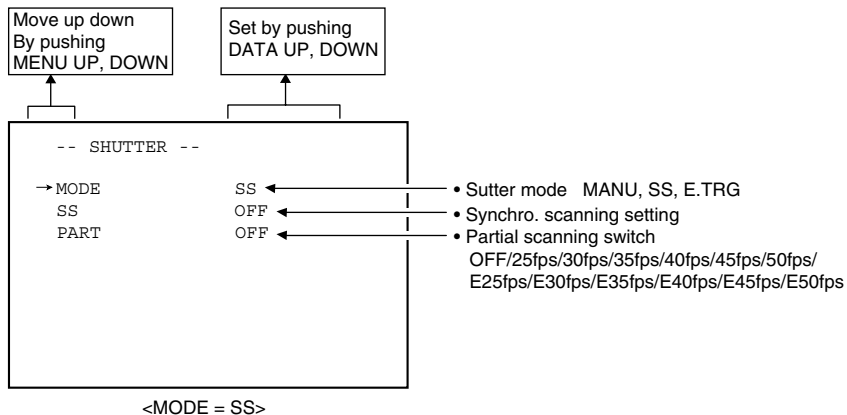

(a) Changing the shutter speed setting

- ① Set the "→" to SS by pushing [MENU UP], [MENU DOWN] buttons.
- ② Select the shutter speed by pushing [DATA UP], [DATA DOWN] buttons.

(b) Partial scanning setting

- ① Set the "→" to PART by pushing [MENU UP], [MENU DOWN] buttons.
- ② Select the mode by pushing [DATA UP], [DATA DOWN] buttons.

Note:


The slow shutter speed may increase the fixed pattern noise and/or the white pixels. This is a characteristic of CCD, and is not a symptom of malfunction.

(1. 3) Changing each setting in E.TRG mode

The E.TRG has five modes; 1P SNR, 1P SR, PW SNR, PW SR, RR.

First set the "→" to MODE and select E. TRG, then set the "→" to E.TRG and select the desired E.TRG mode.

(1. 3. 1) Changing each setting in 1P SNR mode

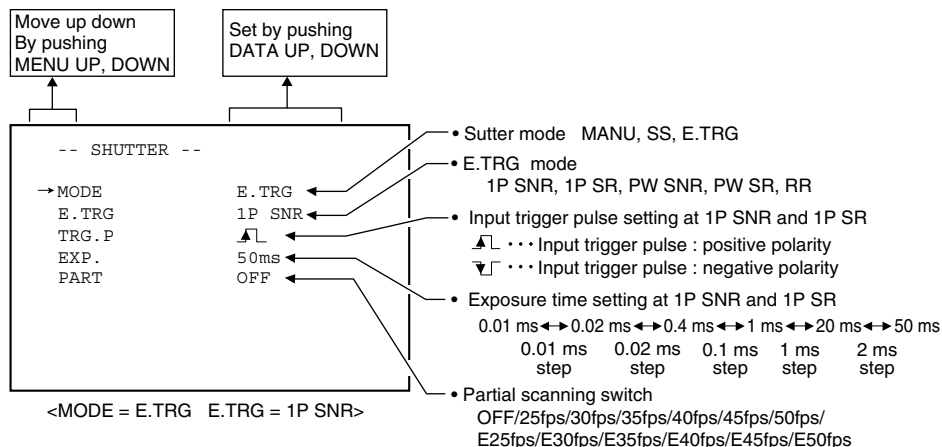

(a) Changing the polarity of inputting trigger pulse setting

- ① Set the "→" to TRG.P by pushing [MENU UP], [MENU DOWN] buttons.
- ② Select either ▲, ▼ by pushing [DATA UP], [DATA DOWN] buttons.


(b) Changing 1P SNR exposure time setting

- ① Set the "→" to EXP. by pushing [MENU UP], [MENU DOWN] buttons.
- ② Set the exposure time by pushing [DATA UP], [DATA DOWN] buttons.

(c) Changing the partial scanning setting

- ① Set the "→" to PART by pushing [MENU UP], [MENU DOWN] buttons.
- ② Select the mode by pushing [DATA UP], [DATA DOWN] buttons.

(1. 3. 2) Changing each setting in 1P SR mode

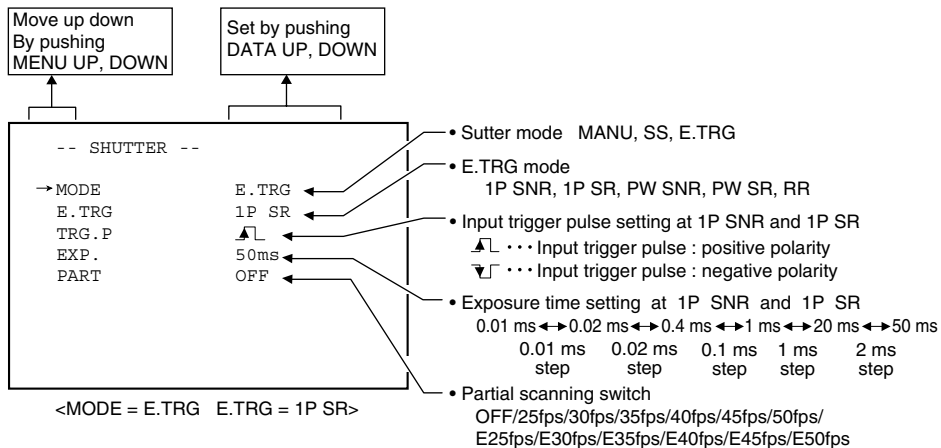

(a) Changing the polarity of inputting trigger pulse setting

- ① Set the "→" to TRG.P by pushing [MENU UP], [MENU DOWN] buttons.
- ② Select either ▲, ▼ by pushing [DATA UP], [DATA DOWN] buttons.


(b) Changing 1P SR exposure time setting

- ① Set the "→" to EXP. by pushing [MENU UP], [MENU DOWN] buttons.
- ② Set the exposure time by pushing [DATA UP], [DATA DOWN] buttons.

(c) Changing the partial scanning setting

- ① Set the "→" to PART by pushing [MENU UP], [MENU DOWN] buttons.
- ② Select the mode by pushing [DATA UP], [DATA DOWN] buttons.

(1. 3. 3) Changing each setting in PW SNR mode

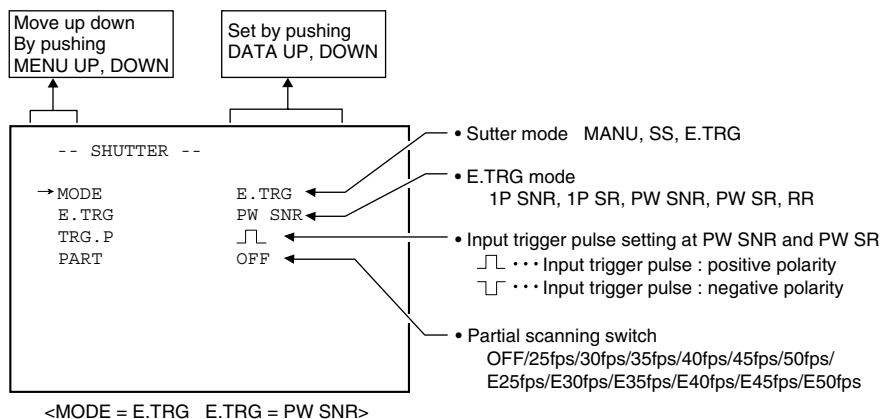

(a) Changing the polarity of inputting trigger pulse setting

- ① Set the "→" to TRG.P by pushing [MENU UP], [MENU DOWN] buttons.
- ② Select either □, ▭ by pushing [DATA UP], [DATA DOWN] buttons.


(b) Changing the partial scanning setting

- ① Set the "→" to PART by pushing [MENU UP], [MENU DOWN] buttons.
- ② Select the mode by pushing [DATA UP], [DATA DOWN] buttons.

Note:

The longer the storage time with extended exposures, the more visible certain characteristics of CCD cameras become: fixed pattern noise, white pixels, etc.

(1. 3. 4) Changing each setting in PW SR mode

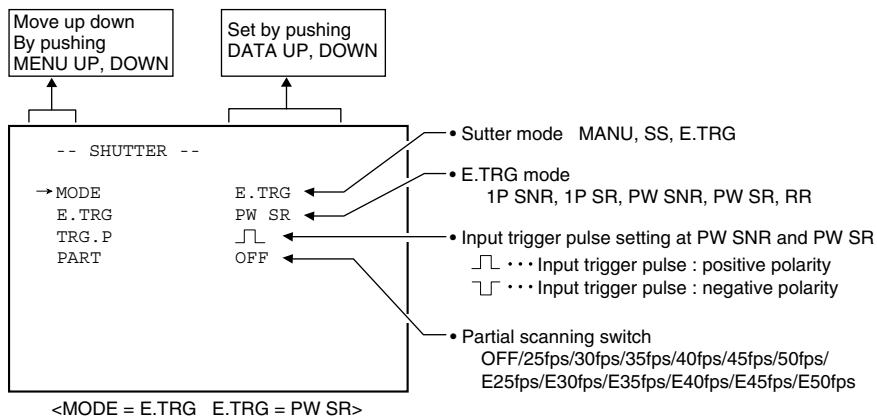


(a) Changing the polarity of inputting trigger pulse setting

- ① Set the "→" to TRG.P by pushing [MENU UP], [MENU DOWN] buttons.
- ② Select either □, □ by pushing [DATA UP], [DATA DOWN] buttons.

Note:

The longer the storage time with extended exposures, the more visible certain characteristics of CCD cameras become: fixed pattern noise, white pixels, etc.

(1. 3. 5) Changing each setting in RR mode

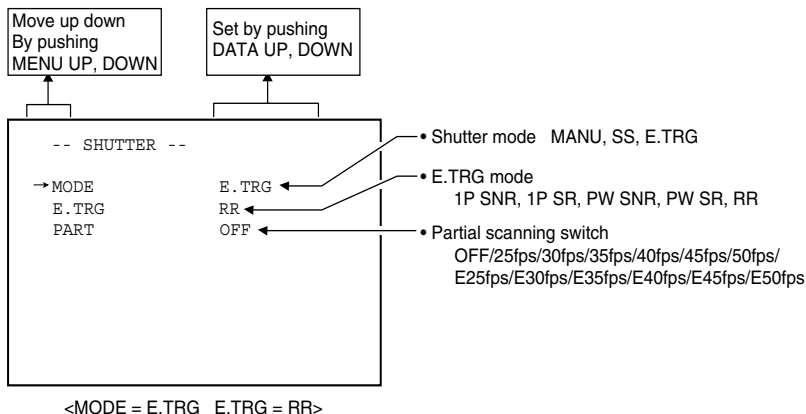

(a) Changing the partial scanning setting

- ① Set the "→" to PART by pushing [MENU UP], [MENU DOWN] buttons.
- ② Select the mode by pushing [DATA UP], [DATA DOWN] buttons.

Note:

The longer the storage time with extended exposures, the more visible certain characteristics of CCD cameras become: fixed pattern noise, white pixels, etc.

(2) GAIN (Video gain)

When the image is dark even if the lens iris is open, change the gain (video gain) to get the proper video level. For the gain adjustment of the unit, MANU (Manual) and OFF (0dB) modes are provided.

① MANU (Manual gain)


Gain adjustment is performed on the GAIN menu. The adjustment range is from 0dB to 18dB in 1dB steps.

② OFF

Gain is fixed at 0dB.

Set the "→" to MODE, push the [DATA UP], [DATA DOWN], and select mode among MANU, OFF.

(2. 1) Changing each setting in GAIN

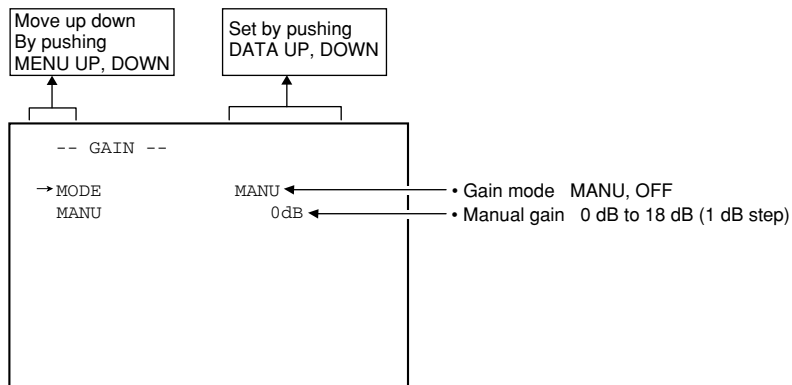

(a) Changing the gain in MANU mode


- ① Set the "→" to MANU by pushing [MENU UP], [MENU DOWN] buttons.
- ② Set the manual gain by pushing [DATA UP], [DATA DOWN] buttons.

(3) WHT BAL (White balance)

WHT BAL has two modes; AWB, MANU.

Set the "→" to MODE, push the [DATA UP], [DATA DOWN], and select mode among AWB, MANU.


(3. 1) Changing each setting in AWB (Automatic White Balance) mode

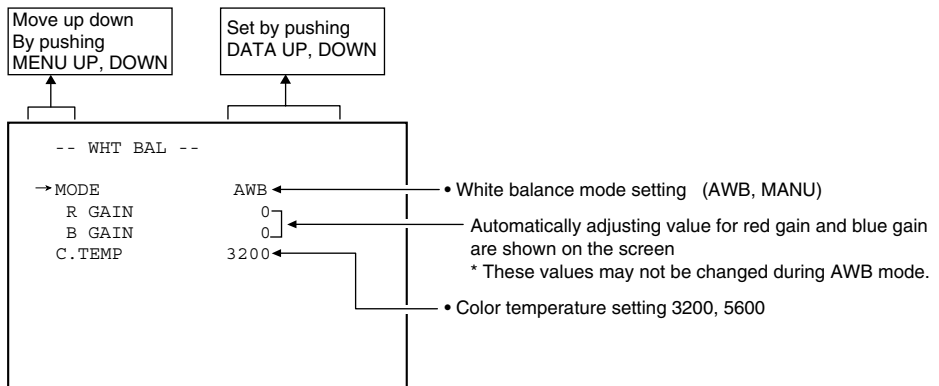

(a) Changing color temperature setting

- ① Set the "→" to C.TEMP by pushing [MENU UP], [MENU DOWN] buttons.
- ② Select either 3200 or 5600 by pushing [DATA UP], [DATA DOWN] buttons.

(3. 2) Changing each setting in MANU (Manual) mode

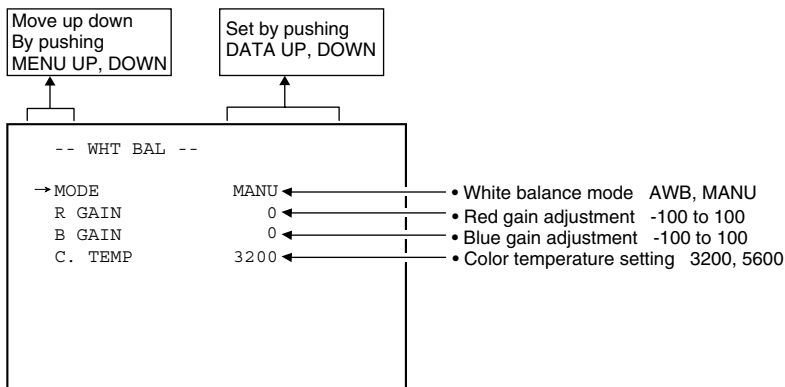

(a) Changing the red gain

- ① Set the "→" to R GAIN by pushing [MENU UP], [MENU DOWN] buttons.
- ② Set the red gain by pushing [DATA UP], [DATA DOWN] buttons.

(b) Changing the blue gain

- ① Set the "→" to B GAIN by pushing [MENU UP], [MENU DOWN] buttons.
- ② Set the blue gain by pushing [DATA UP], [DATA DOWN] buttons.

(4) PROCESS

- Gamma Correction (GAMMA)
Select either OFF or ON of Gamma Correction.

- Master Pedestal (M. PED)
Set the Pedestal level of each RGB.

- R Pedestal (R. PED)
Set the Pedestal level of Red.

- B Pedestal (B. PED)
Set the Pedestal level of Blue.

- Shading Correction (SHAD.)

Due to the lens used or the environmental condition, vertical color shading may occur at the top and bottom of the screen. In this case, the shading correction can decrease the color shading. For the shading correction of the unit, MANU (Manual shading correction) and OFF (no shading correction) modes are provided.


① MANU (Manual Shading)

Adjust the correction amount on the PROCESS menu by confirming with a monitor or a waveform monitor.

② OFF

The status is no shading correction.

*** The shading correction is effective when the lens iris or zoom ratio is fixed. Use the unit with SHAD. OFF for variable lens conditions.**

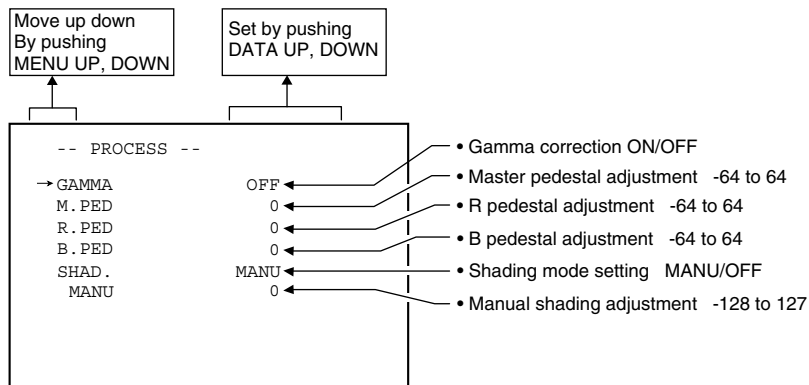

(4.1) Changing gamma correction

- ① Set the "→" to GAMMA by pushing [MENU UP], [MENU DOWN] buttons.
- ② Set the gamma correction by pushing [DATA UP], [DATA DOWN] buttons.

(4.2) Changing master pedestal

- ① Set the "→" to M. PED by pushing [MENU UP], [MENU DOWN] buttons.
- ② Set the master pedestal by pushing [DATA UP], [DATA DOWN] buttons.

(4.3) Changing R pedestal

- ① Set the "→" to R. PED by pushing [MENU UP], [MENU DOWN] buttons.
- ② Set the R pedestal by pushing [DATA UP], [DATA DOWN] buttons.

(4.4) Changing B pedestal

- ① Set the "→" to B. PED by pushing [MENU UP], [MENU DOWN] buttons.
- ② Set the B pedestal by pushing [DATA UP], [DATA DOWN] buttons.

(4. 5) Changing the shading correction mode

- ① Set the "→" to SHAD. by pushing [MENU UP], [MENU DOWN] buttons.
- ② Set the SHAD. by pushing [DATA UP], [DATA DOWN] buttons.


Note: The alignment value for shading is fixed to "0" when selecting SHAD. OFF. MANU is not displayed in the menu.

(4. 6) Changing the manual shading correction setting

- ① Set the "→" to MANU by pushing [MENU UP], [MENU DOWN] buttons.
- ② Set the MANUAL SHADING by pushing [DATA UP], [DATA DOWN] buttons.

(5) SYNC

When an external sync signal is input, the display menu changes from INT (internal sync) to EXT (external sync) automatically.

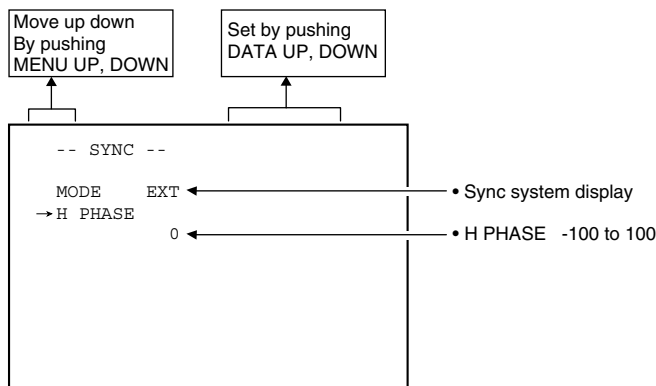


(5. 1) Adjusting horizontal phase

- ① Set the "→" to H PHASE by pushing [MENU UP], [MENU DOWN] buttons.
- ② Adjust the horizontal phase by pushing [DATA UP], [DATA DOWN] buttons.

(6) OPTION

(6. 1) Changing serial communication baud rate

- ① Set the "→" to BAUD RATE by pushing [MENU UP], [MENU DOWN] buttons.
- ② Select either 9600 or 19200 by pushing [DATA UP], [DATA DOWN] buttons.

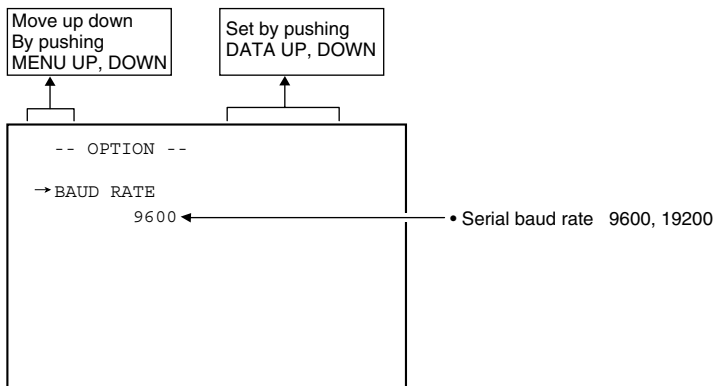

(7) Setting to factory setting status

All the settings can be returned to the factory default status (preset status).

- (1) If characters are displayed on the screen, press the [DISP] button to disable the character display.
- (2) Push [MENU DOWN] and [DATA DOWN] buttons simultaneously for approx. 1 second.
- (3) The preset operation starts. When the preset operation finishes, the character PRESET OK is displayed for approx. 1 second.

7.3 Synchro. Scan Operation

The shutter speed can be set by the double horizontal scanning period (2H) or by the frame.

(1) Setting by 2H

2H/1592H ~ 1590H/1592H stands for the setting by the 2H and the shutter speed can be set by the 2H (62.8 μ s).


When operating Partial Scanning, the number's listed below can be used for setting.

| | |
|---------------|------------------------|
| 25fps, E25fps | 2H/1270H ~ 1268H/1270H |
| 30fps, E30fps | 2H/1060H ~ 1058H/1060H |
| 35fps, E35fps | 2H/910H ~ 908H/910H |
| 40fps, E40fps | 2H/774H ~ 772H/774H |
| 45fps, E45fps | 2H/706H ~ 704H/706H |
| 50fps, E50fps | 2H/636H ~ 634H/636H |

(2) Setting by the frame

2FRM to 512FRM stand for the setting (long period exposure) by the frame.

The video signal stored during the frame period set is output as 1 frame video image at a frame interval specified.

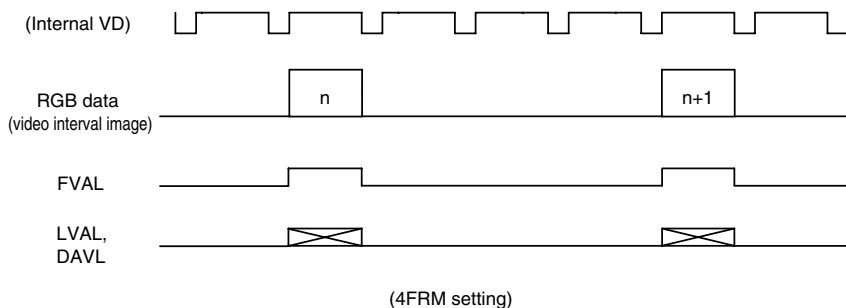


7.4 E. TRG (External trigger)

Charge begins to accumulate after the trigger input to CC1 of the DIGITAL terminal, and 1 frame images are output. There are four modes: 1P SNR, 1P SR, PW SNR, PW SR.

(1) 1P SNR (1 Pulse Trigger Sync Non Reset)

Charge begins to accumulate after the trigger input to CC1 of the DIGITAL terminal, and 1 frame images are output.

(1.1) 1 Pulse Trigger SYNC-NON RESET Picture Output Timing

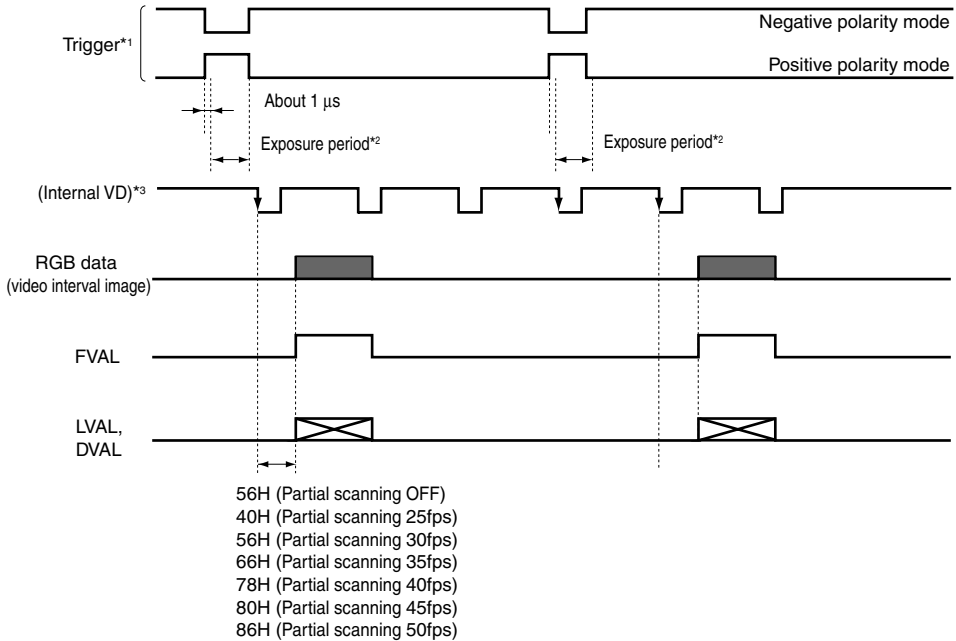

*1: Externally input signal

*2: Exposure time is determined by the setting of "7. 2 (1.3) Changing each setting in E. TRG mode".

*3: Video is output at the falling edge of the internal VD following completion of the exposure period.

The video and FVAL/LVAL/DVAL have a paired relationship.


Note:

When the next trigger is input before completion of the output of the video corresponding to the trigger, there will be an effect on the video.

(2) 1P SR (1 Pulse Trigger Sync Reset)

Charge begins to accumulate after the trigger input to CC1 of the DIGITAL terminal, the vertical sync signal is reset and frame images are output.

(2. 1) 1 Pulse Trigger SYNC-RESET Picture Output Timing

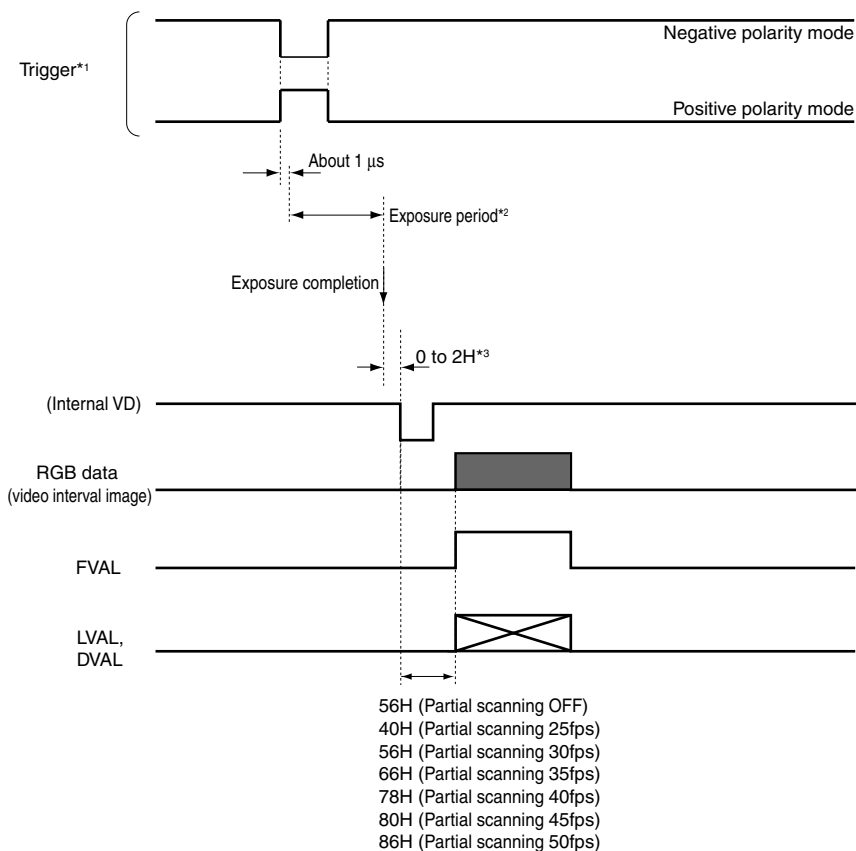

*1: Externally input signal

*2: Exposure time is determined by the setting of "7. 2 (1.3) Changing each setting in E.TRG mode".

*3: VD is generated after 0 to 2H following the completion of the exposure period and the video is synchronized to this and output.


Note:

When the next trigger is input before completion of the output of the video corresponding to the trigger, there will be an effect on the video.

(3) PW SNR (Pulse width trigger SYNC-NON RESET)

The trigger input to CC1 of the DIGITAL terminal develops 1 frame images.

(3. 1) Pulse Width Trigger SYNC-NON RESET Picture Output Timing

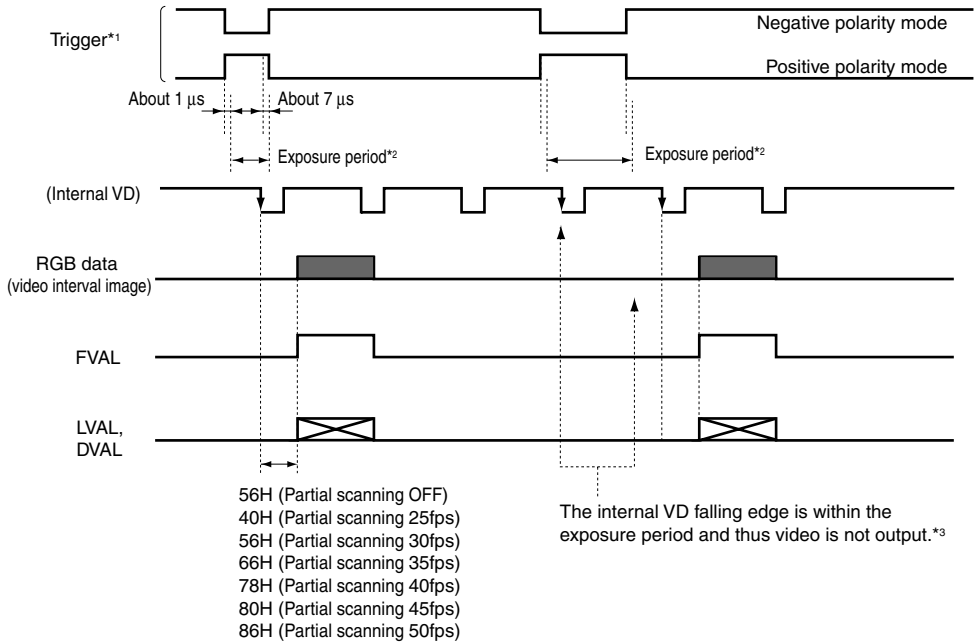

*1: Externally input signal

*2: Exposure time = Trigger pulse width + 6 μ s

(Valid trigger pulse width is 2 μ s or greater for external trigger shutter operation.)

*3: Video is output at the falling edge of the internal VD following completion of the exposure period.

The video and FVAL/LVAL/DVAL have a paired relationship.


Note:

When the next trigger is input before completion of the output of the video corresponding to the trigger, there will be an effect on the video.

(4) PW SR (Pulse width trigger SYNC-RESET)

The trigger input to the CC1 of the DIGITAL terminal develops 1 frame images.

(4. 1) 1 Pulse Width Trigger SYNC-RESET Picture Output Timing

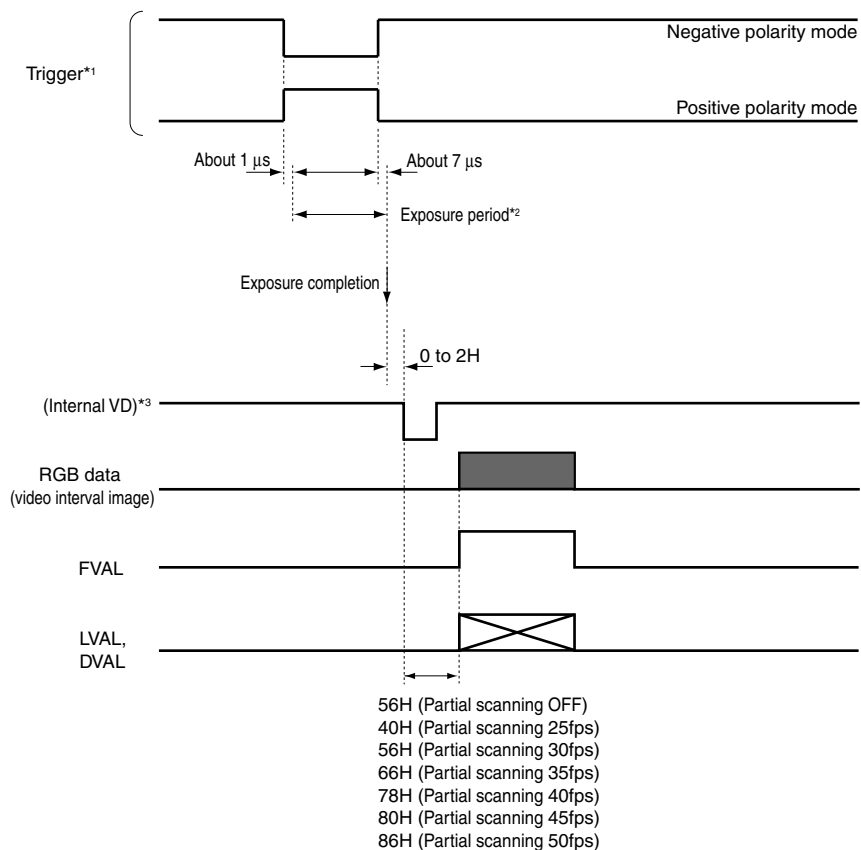

*1: Externally input signal

*2: Exposure time = Trigger pulse width + 6 μ s

(Valid trigger pulse width is 2 μ s or greater for external trigger shutter operation.)

*3: VD is generated after 0 to 2H following the completion of the exposure period and the video is synchronized to this and output.

Note:

When the next trigger is input before completion of the output of the video corresponding to the trigger, there will be an effect on the video.


(5) RR (Reset restart)

Input of an external reset-restart signal (CC4 of the DIGITAL terminal: External VD input) permits one screen of information to be output at an arbitrary timing.

(5. 1) Long Term Exposure

When a sufficient sensitivity is not obtained with the normal operation conditions or capturing the trial of a moving subject is desired, the reset-restart function allows high-sensitivity images by extending the exposure time. To achieve this, please input from an external source a VD signal that has an expanded VD pulse and VD pulse interval.

(5. 2) Input Timing Chart Example

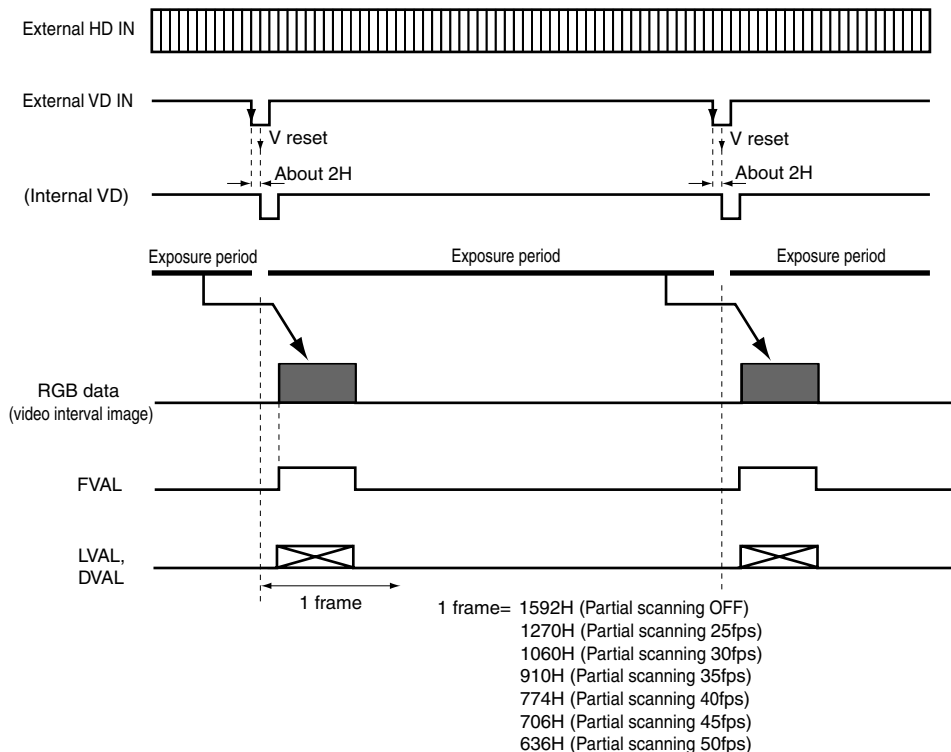


External VD interval: more than 1 frame

7.5 Partial Read

(1) Partial Scanning OFF (All pixels scanning)

 In this mode, all pixels independent signal from the DIGITAL connector is output each 1/20 second (Line order output).




(2) Partial Scanning ON


In this mode, the pixel signal of the vertical center portion from the DIGITAL connector is output.

In the E.**fps mode, the partial scanning and the all pixels scanning can be switched by the DIGITAL terminal (CC2: partial scanning control signal).

| CC2 | E.25fps | E.30fps | E.35fps | E.40fps | E.45fps | E.50fps |
|-----|------------------------|------------------------|------------------------|------------------------|------------------------|------------------------|
| 'L' | Partial scanning 25fps | Partial scanning 30fps | Partial scanning 35fps | Partial scanning 40fps | Partial scanning 45fps | Partial scanning 50fps |
| 'H' | All pixels scanning | All pixels scanning | All pixels scanning | All pixels scanning | All pixels scanning | All pixels scanning |

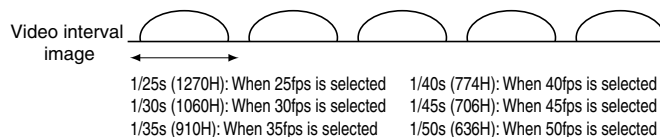

(3) When Partial Scanning Mode is ON

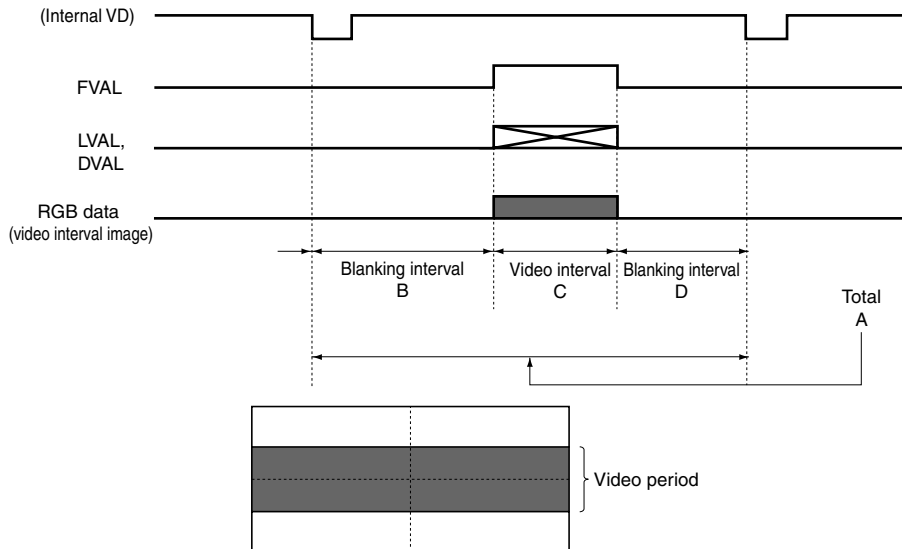

| Mode | Total A | Blanking interval B | Video interval C | Blanking interval D |
|-------|---------|---------------------|------------------|---------------------|
| 25fps | 1270H | 40H | 1204H | 26H |
| 30fps | 1060H | 56H | 972H | 32H |
| 35fps | 910H | 66H | 792H | 52H |
| 40fps | 774H | 78H | 644H | 52H |
| 45fps | 706H | 80H | 564H | 62H |
| 50fps | 636H | 86H | 480H | 70H |

7.6 External Sync

When using the unit with an external sync signal, input HD and VD to CC3 and CC4 of the DIGITAL terminal. When the external sync signal is input, the camera automatically switches its sync from the internal sync to the external sync.

The operation is as shown below, depending on the unit's status and how external sync signals are input.

| Shutter mode | HD input | VD input | Note |
|--------------------------------|----------|----------|--|
| At time of SYNC-NON RESET mode | N | N | Internal sync mode |
| | Y | Y | External sync mode |
| | N | Y | Only V reset is applied due to VD input. Normally not used. |
| | Y | N | HD is synchronized to external, but video is not output because there is no VD input. Normally not used. |
| At time of SYNC-RESET mode | N | * | Internal sync mode. The presence of VD is ignored, and after a specified time after a trigger input, V reset is applied. |
| | Y | * | HD is synchronized to external. The presence of VD is ignored, and after a specified time after a trigger input, V reset is applied. |
| At time of reset restart | Y | Y | HD is synchronized to external. Video is output due to VD input. |
| | N | Y | HD is synchronized to the inside of the camera. Video is output due to VD input. |
| | * | N | Video is not output because there is no VD input. Normally not used. |
| At time of manual shutter | N | N | Internal sync mode |
| | Y | Y | External sync mode |
| | Y | N | HD is synchronized to external. Normally not used. |
| | N | Y | Disabled |

* Either Y or N is permitted.

(1) External sync signal polarity

HD: 2 to 5V(p-p) Negative

VD: 2 to 5V(p-p) Negative

(2) External sync frequency range

(External sync with HD, VD)


Within $\pm 1\%$ (at horizontal sync frequency of 15.92 kHz)

(3) Using the unit with external sync signal

When adjusting H (horizontal) phase refer to the item "7.2 (5) (5.1) Adjusting horizontal phase".


(3.1) H (horizontal) phase adjustment

Observe the external sync signal and the LVAL signal output waveform of the unit with a dual trace oscilloscope, and adjust H phase so that the H phases match.

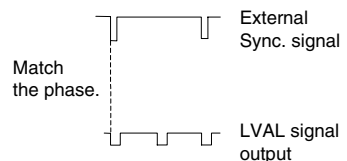


8. INPUT OUTPUT SIGNAL SPECIFICATOINS

 
(1) HD Input Specifications



 
(2) VD Input Specifications



(3) Trigger Pulse Specifications

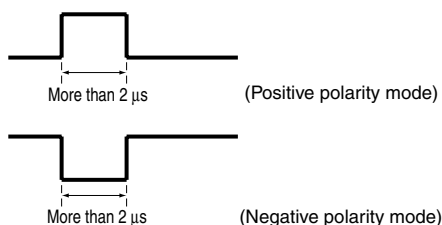

(4) External HD/VD Input Phase Specifications

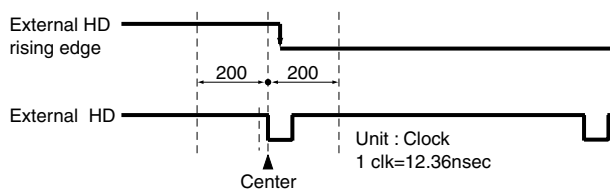

The phase relationship of the external HD and VD should correspond to the center phase (i.e., the external HD falling edge) as illustrated in the above diagram.

External VD falling edge:

Please input within about 200 clock cycles of the standard center phase.

Note that V sync of the video is output with a delay of about 2H from the external VD at the time of reset-restart and the external trigger mode.

In the normal mode:

Continuously with the HD period of $62.8\mu\text{s}$ and VD period of 50.0ms (partial scanning 25fps: 39.87ms , 30fps: 33.29ms , 35fps: 28.58ms , 40fps: 24.31ms , 45fps: 22.17ms , 50fps: 19.98ms).


Phase timing is as illustrated in the above diagram (with only the falling edge applicable).

In the reset-restart/external trigger mode:


Continuously with the HD period of $62.8\mu\text{s}$. VD (reset) is at an arbitrary timing with the phase of HD being within the standard of the above diagram.

9. OUTPUT WAVEFORM TIMING CHART

(1) Horizontal Output Waveform Timing Chart

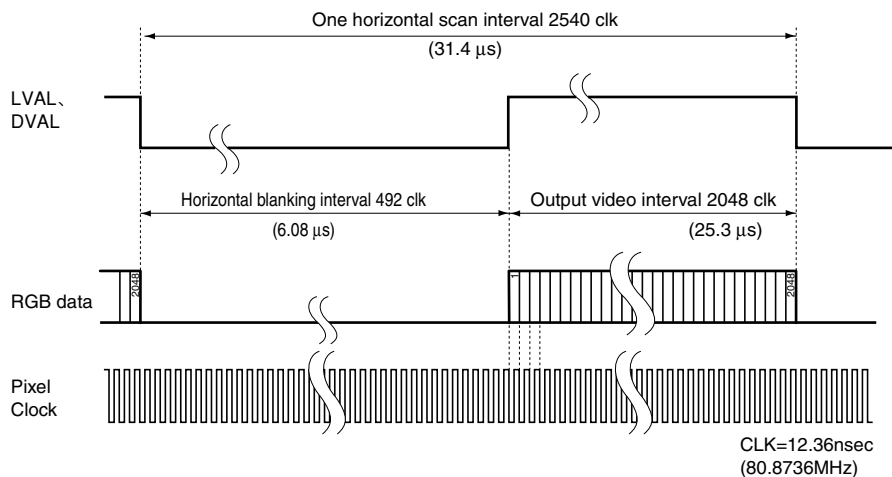

(2) Vertical Output Waveform Timing Chart

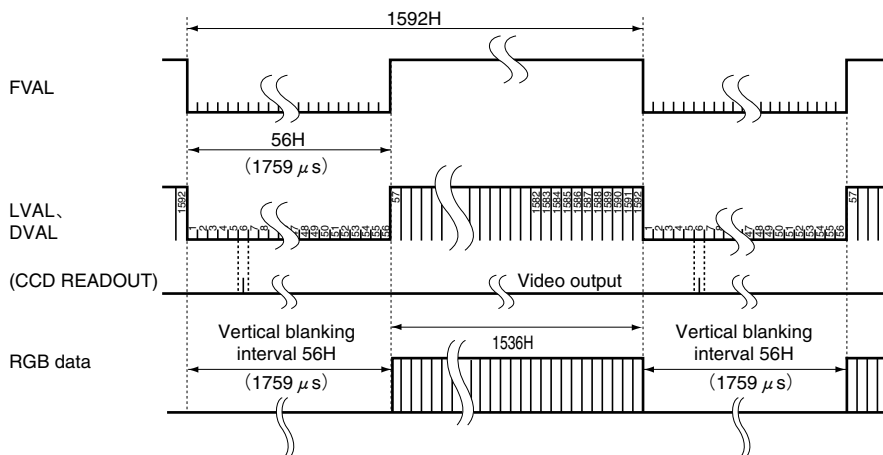


10. SPECIFICATIONS

| | |
|---------------------------------------|---|
| Power supply | 12V DC±10% |
| Power consumption | Approx. 5.6W |
| Pick-up system | RGB, 3CCD |
| Image sensor | 1/3inch All pixels CCD (Effective pixels Horizontal : 1034, Vertical : 779) |
| Scanning System | Progressive scan |
| Video output pixels | Horizontal pixels : 2048, Vertical : 1536 |
| Pixel clock frequency | 80.8736MHz |
| Sync signal frequency | Horizontal : 31.84KHz, Vertical : 20Hz |
| Sync system | Internal/External (Automatic switching) |
| Sensitivity | F8 standard (2000 lx, 3000K) |
| Minimum illumination | 10 lx (F2.2, Sensitivity + 18 dB, 3000K) |
| Lens mount | C mount (flange back : 17.526 mm in-air) |
| Ambient temperature | 0 to 40°C (32 to 104°F) |
| Ambient humidity | Less than 90% |
| Weight | Approx. 160g (0.353lbs) |
| External dimension | 44 (W) x 44 (H) x 78 (D) mm (1.73" (W) x 1.73" (H) x 3.07" (D)) (except for protruded portion) |
| White balance | AWB (Automatic white balance), MANUAL (Manual) |
| Gain | MANUAL (Manual), OFF (0 dB) |
| Partial scanning | 25fps, 30fps, 35fps, 40fps, 45fps, 50fps |
| Output signal | 8-bit RGB, Digital output (Camera Link format) |
| Sync signal output | FVAL, LVAL, DVAL (Positive polarity) Pixel Clock |
| External trigger input | CC1 (LVDS input), More than 2 μs pulse width |
| Partial scanning control signal input | CC2 (LVDS input) |
| Interface | Serial data interface : Ser TC (RXD), Ser TFG (TXD) |
| Optional parts | IK-TF9H (CAMERA HEAD) EXC-CL05S (Cable), etc |

The designs and specifications are subject to change without notice.

11. EXTERNAL APPEARANCE DIAGRAM

Unit : mm [inch]

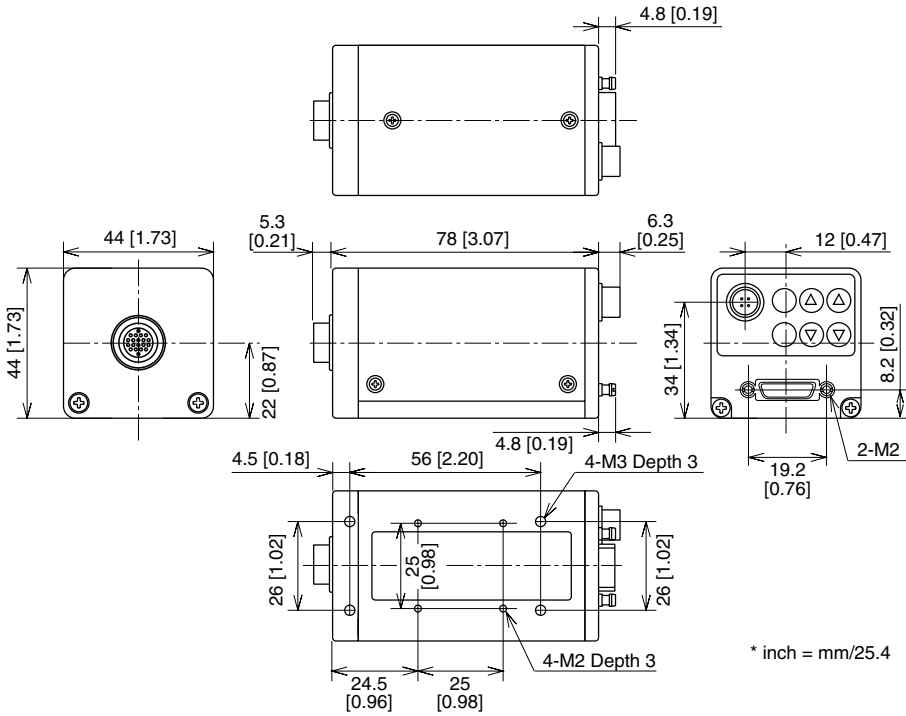

12. BEFORE MAKING A SERVICE CALL

| Symptom | Items to be checked |
|------------|--|
| No image | <ul style="list-style-type: none">• Is the power supplied correctly?• Is the lens iris adjusted correctly?• Are the cables connected correctly?• Is the shutter mode set correctly?• Is the image process equipment set correctly? |
| Poor color | <ul style="list-style-type: none">• Is the monitor adjusted correctly?• Is the white balance of the camera adjusted correctly?• Is the illumination dark? |

Limited Warranty – TOSHIBA CCD Camera

The Imaging Systems Division of Toshiba America Information Systems, Inc. ("ISD") makes the following limited warranties with regard to this CCD Camera ("Product"). These limited warranties extend to the Original End-User ("You[r]").

One (1) Year Limited Warranty of Labor and Parts

ISD warrants that this Product will perform in accordance with specifications for a period of one (1) year from the date of purchase by the Original End-User. During this one (1) year period, ISD will repair or replace the Product, if it does not perform as warranted. In order to take advantage of this Limited Warranty, You must: (a) deliver the Product to an ISD Authorized Service Provider ("ASP"); and (b) pay all transportation and insurance charges for shipment of the Product to the ASP. ISD reserves the right to substitute factory refurbished parts in place of those in need of repair.

Instruction Manual (Owner's Manual):

You should read the Instruction Manual (Owner's Manual) thoroughly before operating this Product. Before seeking warranty service, you should check the troubleshooting guide in the Instruction Manual (Owner's Manual) and follow the instructions to correct the problem.

Your Responsibilities

This Limited Warranty is subject to the following conditions:

1. You must provide the bill of sale or proof of purchase at the time that warranty service is required.
2. You must notify an ASP within thirty (30) days after you discover that the Product does not perform in accordance with specifications during the Limited Warranty period.
3. All warranty servicing of this product must be made by an ISD Authorized Service Provider.
4. You must pack the Product in its original carton using the original packing material, then insert the original carton containing the Product into another carton with additional packing material before shipping the Product to an ASP.

DISCLAIMERS:

ALL OTHER EXPRESS OR IMPLIED WARRANTIES ON THIS PRODUCT, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED. SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

IF THIS PRODUCT IS NOT IN GOOD WORKING ORDER AS WARRANTED ABOVE, YOUR SOLE AND EXCLUSIVE REMEDY SHALL BE THE REPAIR OR REPLACEMENT OF THE PRODUCT. IN NO EVENT WILL ISD OR ITS PARENT COMPANY OR ANY ASP BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT. THIS LIMITATION APPLIES TO DAMAGES OF ANY KIND, INCLUDING ANY DIRECT OR INDIRECT DAMAGES, LOST PROFITS, LOST SAVINGS OR OTHER SPECIAL, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES, WHETHER FOR BREACH OF CONTRACT, TORT OR OTHERWISE, OR WHETHER ARISING OUT OF THE USE OF OR INABILITY TO USE SUCH PRODUCT, EVEN IF TAIS, ITS PARENT COMPANY, OR AN ASP HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR OF ANY CLAIM BY ANY OTHER PARTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR SOME PRODUCTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

THIS LIMITED WARRANTY SHALL BE VOID IF THE PRODUCT OR PARTS HAVE BEEN SUBJECTED TO MISUSE, ABUSE, ACCIDENT, IMPROPER INSTALLATION, IMPROPER MAINTENANCE, OR USE IN VIOLATION OF ISD'S WRITTEN INSTRUCTIONS, OR WHERE THE PRODUCT HAS BEEN ALTERED OR MODIFIED WITHOUT ISD'S PRIOR AUTHORIZATION, OR UPON THE REMOVAL OR ALTERATION OF ISD'S FACTORY SERIAL NUMBER. LABOR SERVICE CHARGES FOR PRODUCT INSTALLATION, SET UP AND ADJUSTMENT OF CONTROLS ARE NOT COVERED BY THIS LIMITED WARRANTY.

How to Obtain Warranty Service – Step-By-Step Procedures:

To obtain warranty service, You should:

1. Contact an ASP for warranty service within thirty (30) days after the Product fails to comply with specifications.
2. Arrange for shipment of the Product to an ASP.
3. Securely pack the Product as described above, insure the carton, and include a letter explaining the problem and a copy of the bill of sale or proof of purchase.
4. Prepay all transportation and insurance costs.

Questions? If you have any questions, please check ISD's Web Site or send an e-mail as follows:

Web Site: <http://www.toshiba.com/taisisd/indmed>

E-mail: CCTVtech.support@tais.toshiba.com

No person, agent, distributor, dealer, authorized service provider, or company is authorized to change, modify, or extend the terms of this Limited Warranty in any manner whatsoever. The time within which an action must be commenced to enforce any obligation of ISD arising under this Limited Warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one (1) year from the date You discover or should have discovered the problem. This limitation does not apply to implied warranties arising under state law. Some states do not permit limitation of the time within which You may bring an action beyond the limits provided by state law, so the above provision may not apply to You. This Limited Warranty gives You specific legal rights and You may also have other rights which vary from state to state.

TOSHIBA AMERICA INFORMATION SYSTEMS, INC.

Imaging Systems Division

9740 Irvine Boulevard, Irvine, CA 92618-1697

Copyright© 2007 Toshiba America, Inc. All rights reserved.

TOSHIBA